

How do I scan the channels on my Philips TV?



Before you begin

- Some steps on your TV may **differ** from the **steps shown below**.
- Do not **insert your CI+ module** into your TV until **after** you have scanned the channels!
- If you are asked to enter a **PIN code** and have **forgotten** it, try one of the **default PIN codes**: 0000, 1111 or 1234.

Scan the channels

- 1.** Press the **Home** button on your remote control.
- 2.** Select **Setup** and press **OK** on your remote control.
- 3.** Select **Search for channels** and press **OK** on your remote control.
- 4.** Select **Re-install channels** and press **OK** on your remote control.
- 5.** Select **Belgium** and press **OK** on your remote control.
- 6.** Select **Cable (DVB-C)** and press **OK** on your remote control.
- 7.** If possible, select **Telenet** as cable provider.
- 8.** Select **Settings** and press **OK** on your remote control before you start the installation.
- 9.** Enter the following **values**:
 - Symbol rate mode: **Automatic**
 - Frequency scan: **Quick scan**
 - Frequency step size: **8MHz**
 - Digital channels: **On**
 - If you see the option Free/Scrambled, choose: **Free + scrambled**
- 10.** Press the **green button** on your remote control.
 - ⓘ Attention:** on some TVs you must first select **Done** and then press **OK** on your remote control (this closes the Setup menu).
- 11.** Select **Start** and press **OK** on your remote control: you now begin the **channel installation**.
- 12.** For **Network frequency** enter the value **322.00**, select **Done** and press **OK** on your remote control.
- 13.** For **Network ID** enter the code for your region: **22** for Flanders or **12** for Brussels
- 14.** Select **Done** and press **OK** on your remote control: **your TV now scans the channels**.
 - This is complete when you see this message: **Channel search finished**.
 - A **summary** of the results is then shown.
 - Select **Finish** and press **OK** on your remote control.

Now continue with steps 4, 5 and 6 in the 'TV with a card' manual.

Tip: automatic channel update

Are you using a Telenet CI+ module? Then you can keep your TV channels **automatically up to date** by performing **the following steps**.

- Press the **Home** button on your remote control.
- Select **Setup** and press **OK** on your remote control.
- First select **Channel settings**, then **Channel installation** and then press **OK** on your remote control.
- Enter the following **values**:
 - Automatic channel update: **On**
 - Channel update message: **On**
- **Close the menu** (you do this by pressing the **Back** button on your remote control one or more times).

Leave your TV in **stand-by mode** (when you are not using it). Every morning at around 6:00 a.m. your TV will check whether there are **channel updates**. If there are, your TV updates its channel list **automatically**. How convenient!