

How do I scan the channels on my Samsung TV?



Before you begin

- Some steps on your TV may **differ** from **the steps shown below**.
- Do not **insert your CI+ module** into your TV until **after** you have scanned the channels!
- Your TV must be set to **TV** and not **HDMI**. You can easily check this by pressing the **source** button on your remote control.
- If you are asked to enter a **PIN code** and have **forgotten** it, try one of the **default PIN codes**: 0000, 1111 or 1234.

Scan the channels

- 1.** Press the **Menu** button on your remote control.
- 2.** Select **Channel** and press **OK** on your remote control.
For **Aerial** you must choose the **Cable** option.
- 3.** Go to **Auto tuning** and press **OK twice** on your remote control.
 - Set the **Automatic tuning** screen to **Cable** (vertical) and **Digital** (horizontal).
 - Then press **OK** on your remote control.
- 4. Enter the following values:**
 - Search mode: **Quick**
 - Network: **Manual**
 - Network ID: the code for your region (**22** for Flanders and **12** for Brussels)
- 5.** Press **OK** on your remote control.
- 6.** For **Frequency** enter the value **322000** and press **OK** on your remote control.
- 7.** For **Modulation** enter the value **256QAM** and for **Symbol rate** enter the value **6875**.
Then select **Search** (or **Next**, this differs by type of TV) and press **OK** on your remote control.
- 8.** Your TV now scans the channels.

Now continue with steps 4, 5 and 6 in the 'TV with a card' manual.