

How do I scan the channels on my Sony TV?



Before you begin

- Some steps on your TV may **differ** from the **steps shown below**.
- Do not insert your **CI+ module** into your TV until **after** you have scanned the channels!
- If you are asked to enter a **PIN code** and have **forgotten** it, try one of the **default PIN codes**: 0000, 1111 or 1234.

Scan the channels

- 1.** Press the **Home** button on your remote control.
- 2.** Go to the **Settings** menu and select **Digital set-up**.
- 3.** Choose **Digital auto tuning** and **confirm** via your remote control.
Note: on some Sony TVs you must first choose **Digital tuning** before you can choose **Digital auto tuning**.
- 4.** Choose **Yes** and **confirm** via your remote control: automatic programming begins.
- 5.** Select **Cable** and **confirm** via your remote control.
- 6.** Select **Cable (DVB-C)** and press **OK** on your remote control.
- 7.** Enter the following **values**:
 - Scan type: **Quick scan**
 - Frequency setting: **Manual**
 - Frequency: **322**
 - Network ID setting: **Manual**
 - Network ID: the code for your region (**22** for Flanders and **12** for Brussels)
- 8.** Select **Start** and **confirm** via your remote control.
- 9.** **Your TV now scans the channels.**
 - This is complete as soon as you see this message: **Auto tuning is successfully finished**.
 - Press the **Return** button to return to the TV screen.

Now continue with steps 4, 5 and 6 in the 'TV with a card' manual.